


## Brief instructions / operating instructions FSA4x2

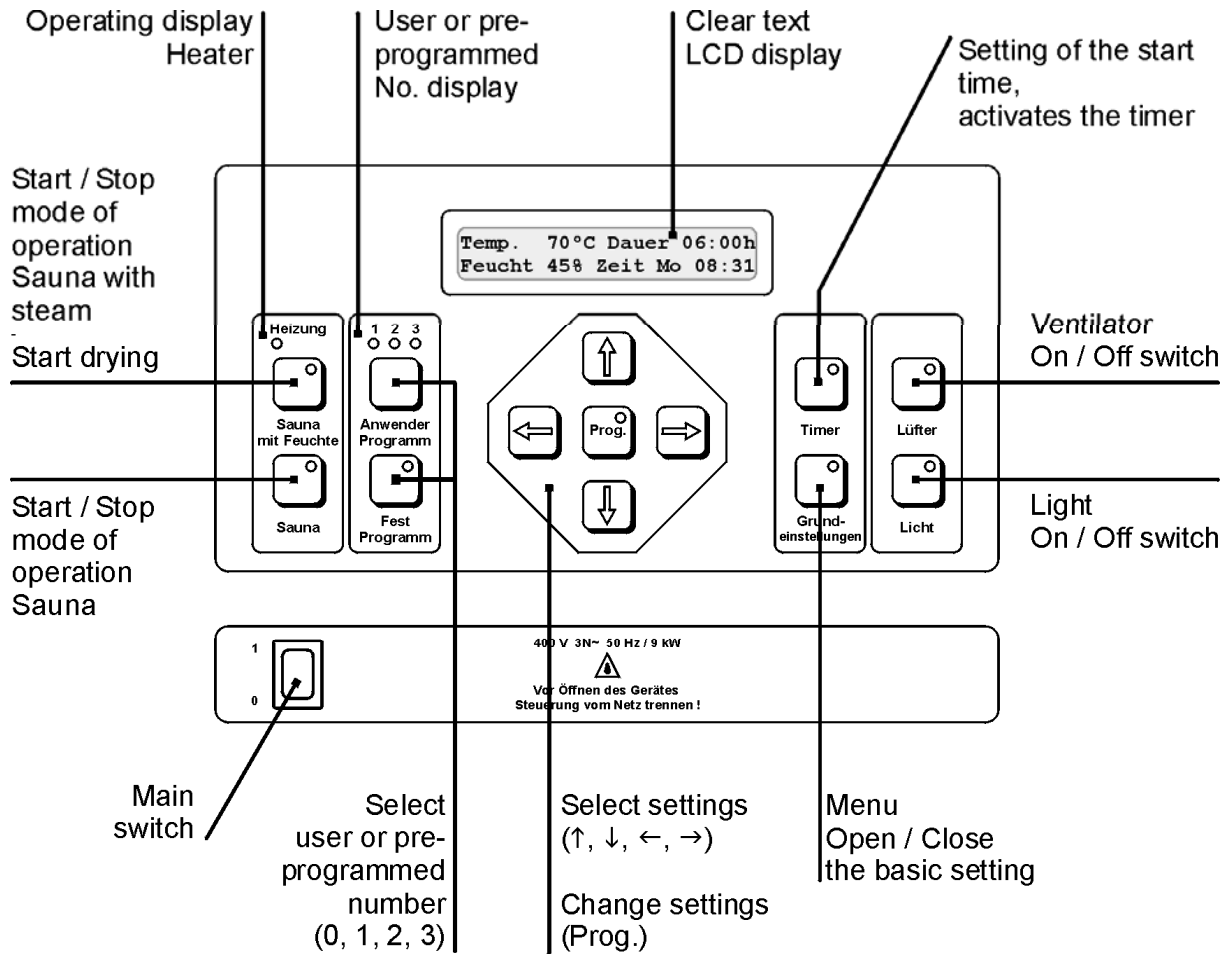

### Quick start:

1. Turn on the main switch.
2. select the required mode of operation (press the button *Sauna* or *Sauna mit Feuchte* once)
3. if necessary, select the desired User or pre-programmed program.
4. Start the mode of operation (press the button *Sauna* or *Sauna mit Feuchte*).

### Automatic start (Timer)

1. Turn on the main switch.
2. select the required mode of operation (press the button *Sauna* or *Sauna mit Feuchte* once)
3. Press the 'Timer' or 'Menü Grundeinstellungen' button.
4. Set the Start time(s).
5. Activate the *Timer* using the 'Timer' button.

### Set / change the set values:

Use the ↓ or ↑ buttons, scroll to reach the respective set values and press the 'Prog.' button to access the programming mode to change the program settings of the selected user or pre-programmed programs. Now enter the desired value using the ↑↓ buttons (and if necessary, also the ← → buttons) and press the 'Prog.' again to end the programming mode.

The basic settings (e.g. Start time) apply to all user or pre-programmed programs.